


CURRENT IN AMPERES

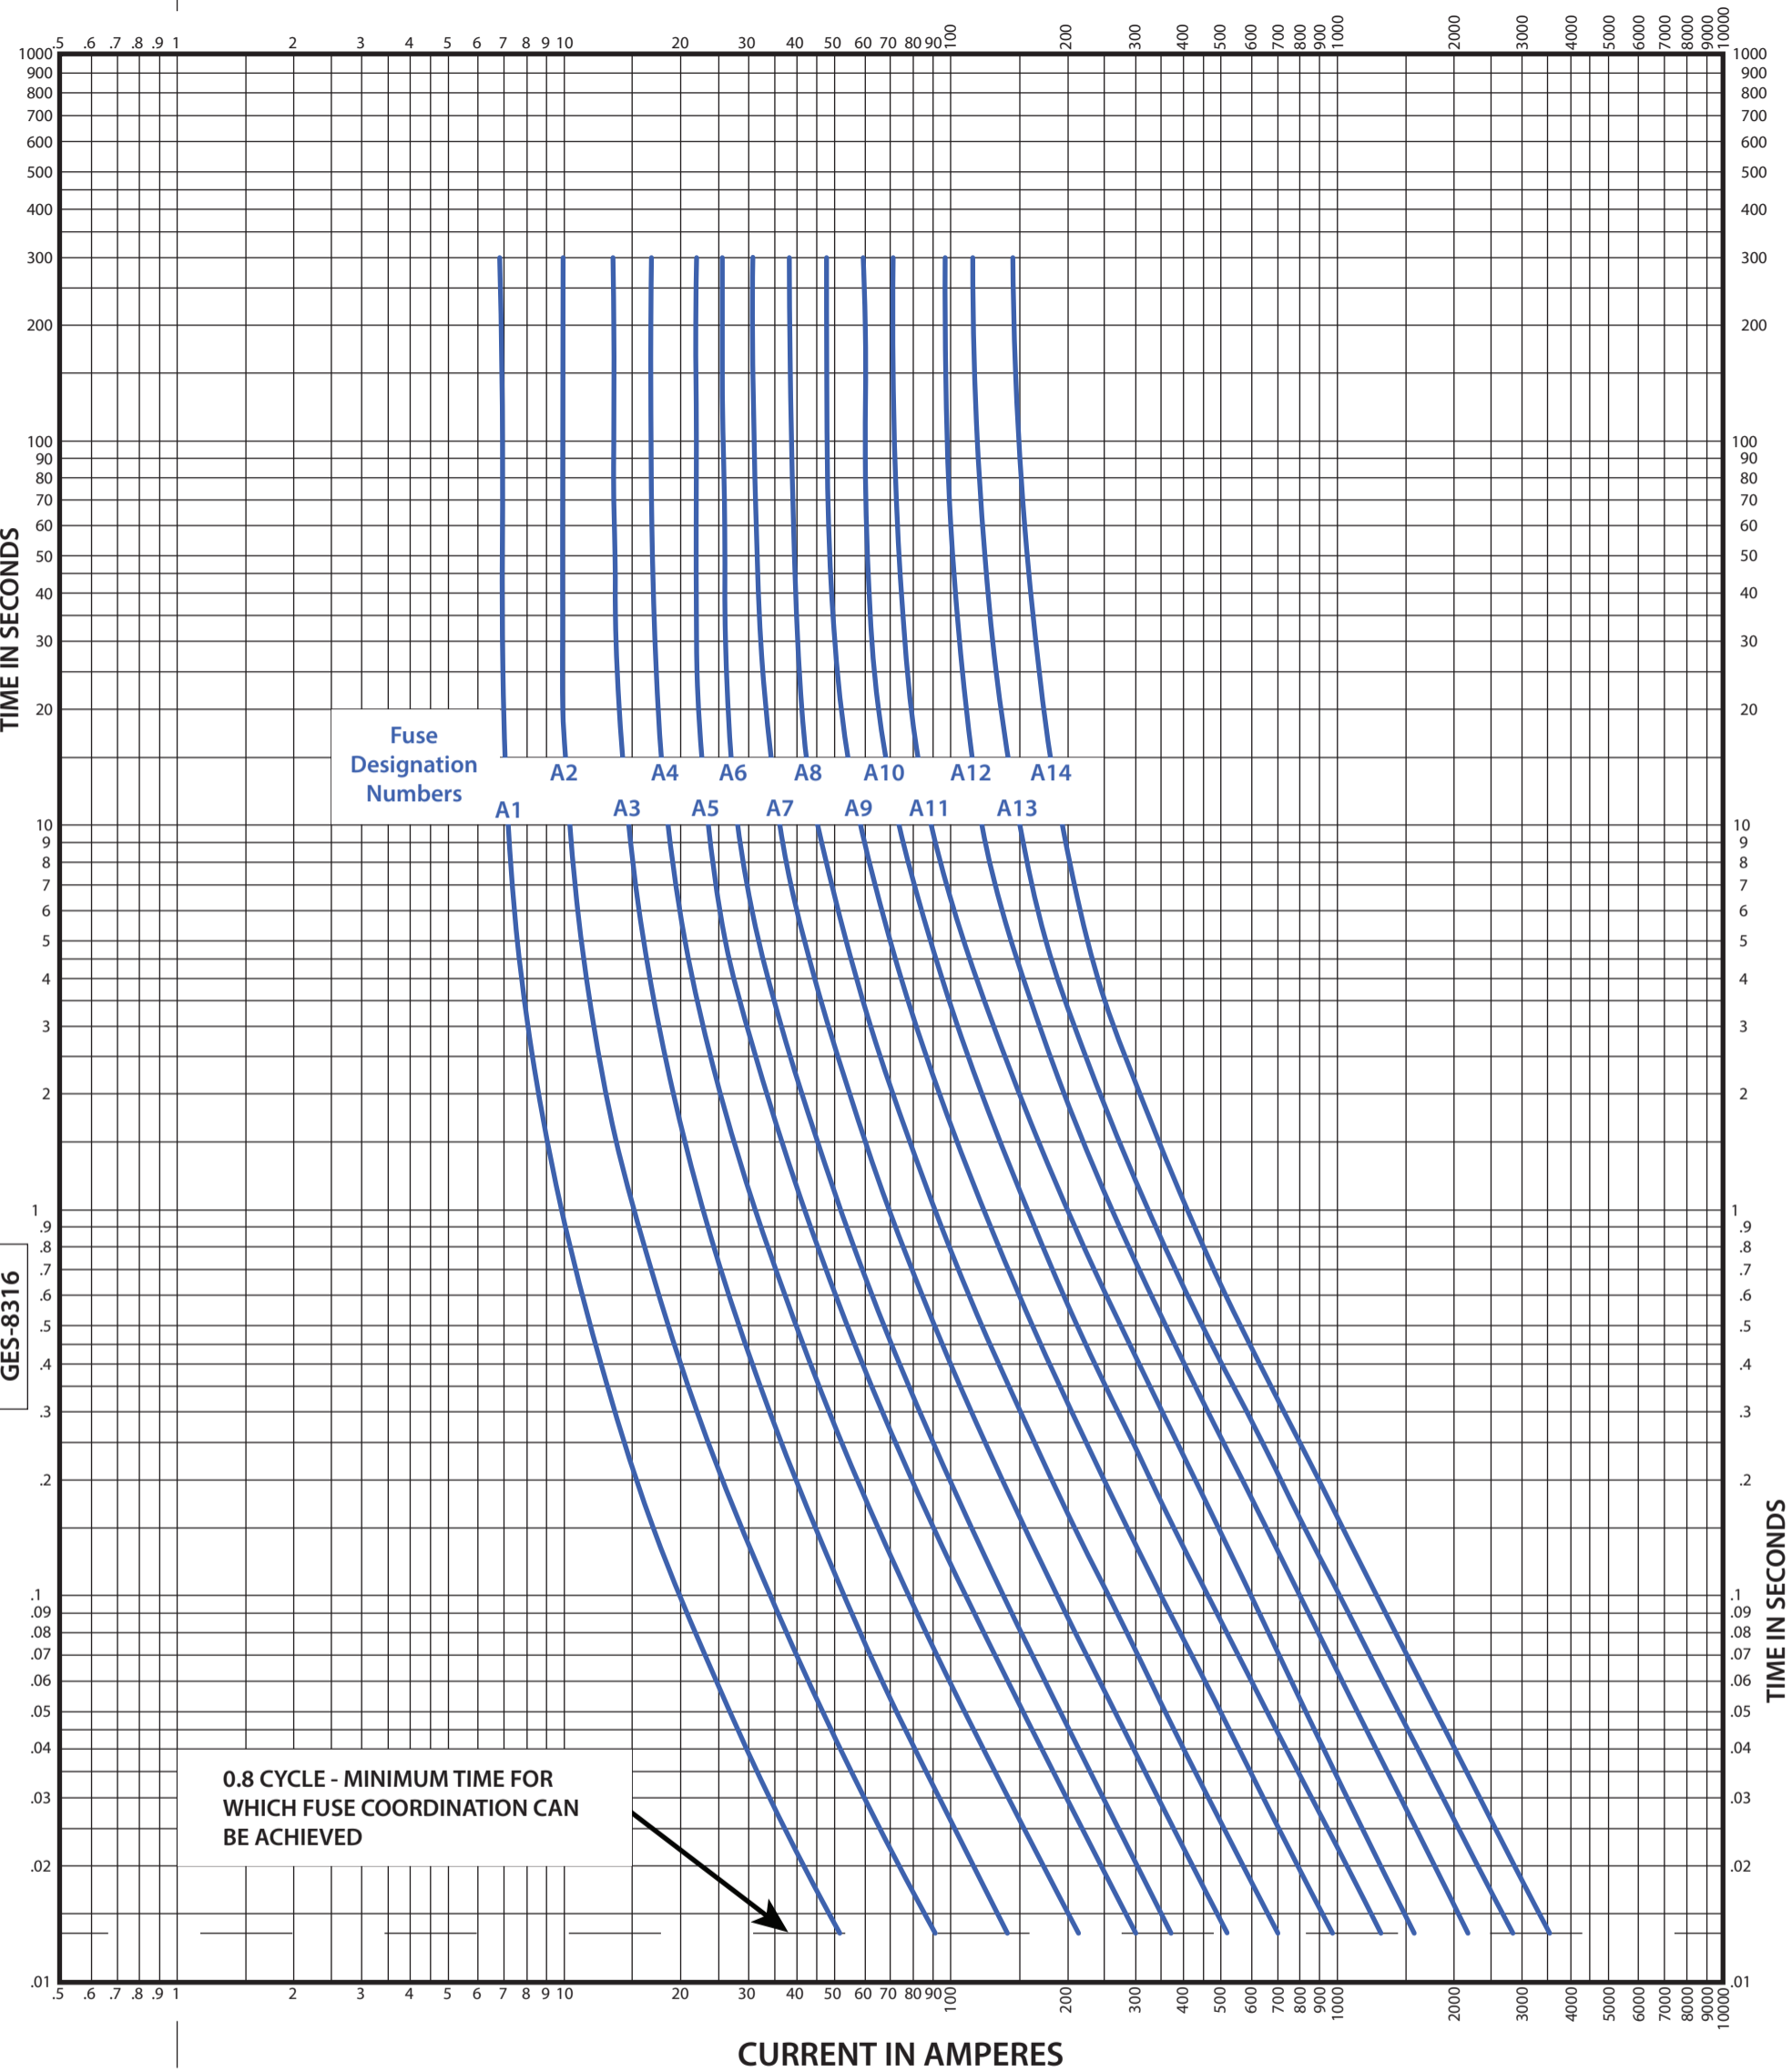

Fuse Designation Numbers  
 A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14

0.8 CYCLE - MINIMUM TIME FOR WHICH FUSE COORDINATION CAN BE ACHIEVED

CURRENT IN AMPERES



GES-8316

Current ratings are not assigned to distribution transformer internal fuses.

CONNECTION BOARD FUSES  
**9F54DA SERIES 5.2 KV MAX**  
**9F54EA SERIES 5.2 KV MAX**  
**9F54GA SERIES 5.2 KV MAX**  
**FUSE NUMBERS A1 TO A14**  
 Minimum-melting Time-current Curves  
 (AT 60 HZ AND 25 C AMBIENT WITH NO INITIAL LOAD)